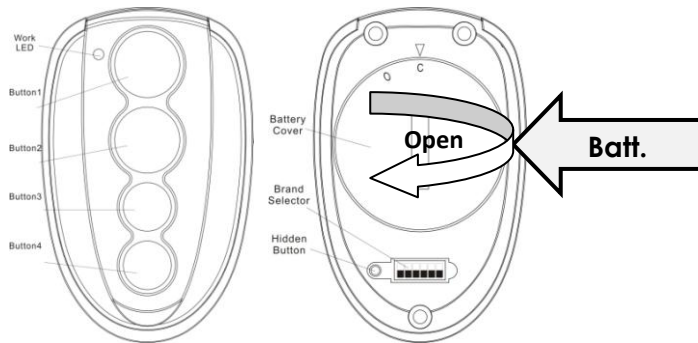 




# MANUAL

## MODEL TXMULTI



### TECHNICAL FEATURES

- ✓ Model TXMULTI
- ✓ 2 x BATT CR2025-3V
- ✓ FREQ 433,92 MHZ
- ✓ 4 Channels
- ✓ STANDAR CHIP
- ✓ SOFTWARE TXMULTI PATENTED

### English – Programming Instructions

1. Locate the selector switch in the back of the remote. Use a paper clip or small object to pry up the rubber cover to expose the selector switch.
2. Set your selector switch for the desired manufacture. See Chart Below
3. The remote is ready to be used, please refer to your receiver's user manual.

Note: To programming BFT, MUTANCODE and ERREKA- Hidden button (beside the switches) will be necessary.

### Español – Instrucciones de programación.









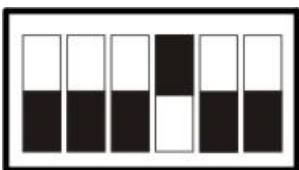 

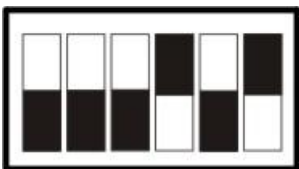 


1. Localice los DIP switches en la parte trasera del mando. Use un clip o un objeto pequeño para retirar la goma protectora que da acceso a los DIP switches.
2. Seleccione la combinación correspondiente de DIP switches de acuerdo a la marca deseada. Véase la tabla a continuación.
3. El mando está listo para usarse. Por favor, diríjase al manual de usuario de su receptor.













Nota: Para BFT, MUTANCODE y ERREKA, será necesaria la utilización del Botón semilla (junto a los DIPS).

### Français - Instructions de programmation

1. Localisez le commutateur à l'arrière de la télécommande. Utilisez un trombone ou un petit objet à soulever le couvercle en caoutchouc pour exposer le sélecteur.
2. Réglez votre sélecteur pour la marque désirée. Voir le tableau ci-dessous
3. La télécommande est prête à être utilisée, s'il vous plaît se référer au manuel d'utilisation de votre récepteur.

Remarque: Pour la programmation BFT, MUTANCODE et ERREKA- Bouton caché (à côté de commutateurs) sera nécessaire.

Num	DIP SWITCHES	R/F	Brand Marca Marque	Original	Comments Comentarios Commentaires
1		Rolling Code	Compatible <b>BFT MITTO</b>		Hidden button Botón semilla Bouton caché
2		Rolling Code	Compatible <b>NICE SMILO</b>		
3		Rolling Code	Compatible <b>BENINCA</b> TO GO WV / WP T WV / WK CUPIDO		
4		Rolling Code	Compatible <b>DEA</b> (KING SISTEM) GENIE GENIE GREEN GENIE WOOD MIO TR-2		
5		Rolling Code	Compatible <b>ERREKA</b> SOL R SOL4R		Hidden button Botón semilla Bouton cache
6		Rolling Code	Compatible <b>GIBIDI</b> DOMINO AU1600		
7		Rolling Code	Compatible <b>FOX</b>		

8		Rolling Code	Compatible <b>PUJOL</b> VARIO 1 OCEAN		Hidden button Botón semilla Bouton cache
9		Rolling Code	Compatible <b>FAAC</b> XT 433 RC		Red LED LED rojo LED rouge
10		Rolling Code	Compatible <b>MUTAN</b> <b>CODE</b>		Hidden button Botón semilla Bouton cache
11		Rolling Code	Compatible <b>DOORHAN</b>		
12		Rolling Code	Compatible <b>APRIMATIC</b> TR		
13		Fixed Code	Compatible <b>PROTECO</b> PTX433405 TX3		

# TX Multi Manual

14		Fixed Code	Compatible <b>DITEC</b> GOL4 GOL4C BIXLP2		
15		Fixed Code	Compatible <b>MOTOR LINE</b>		
16		Fixed Code	Compatible <b>PRASTEL</b> MPSTF E MPSTP E TRQ P TC E		
17		Fixed Code	Compatible <b>ROLLTORE</b>		
18		Encrypted Code	Compatible <b>NICE FLOR-S</b>		
19		Fixed Code	Compatible <b>KINGATE</b> STYLO4 MYO4 C		
20		Fixed Code	Compatible <b>KEY</b> TXB-42		
21		Fixed Code	Compatible <b>ROGER</b> TX 12 TX14/22		

22		Fixed Code	Compatible <b>TELCOMA</b> TANGO		
23		Encrypt ed Code	Compatible <b>LIFTMASTER</b> 94335E		
24		Encrypt ed Code	Compatible <b>LIFTMASTER</b> BILLIONCODE		
25		Encrypt ed Code	Compatible <b>Liftmaster</b> <b>Chamberlain</b> <b>Motorlift 700</b> <b>Lobas</b> <b>Raynor Orion</b>		
26		Encrypt ed Code	Compatible <b>Linear</b>		
27		Encrypt ed Code	Compatible <b>Liftmaster</b> <b>Chamberlain</b> <b>Lobas</b>		